
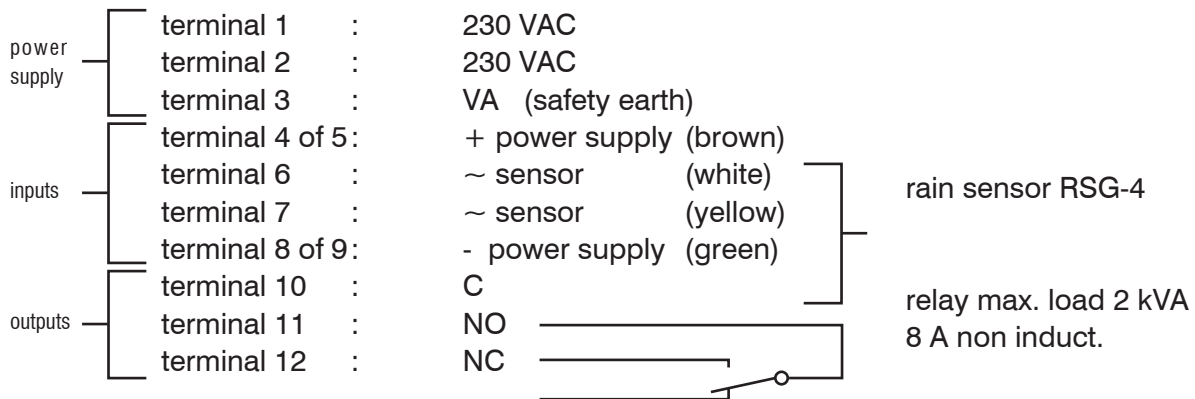


CONNECTING DIAGRAM

RSG-4 & 8RA4-CE

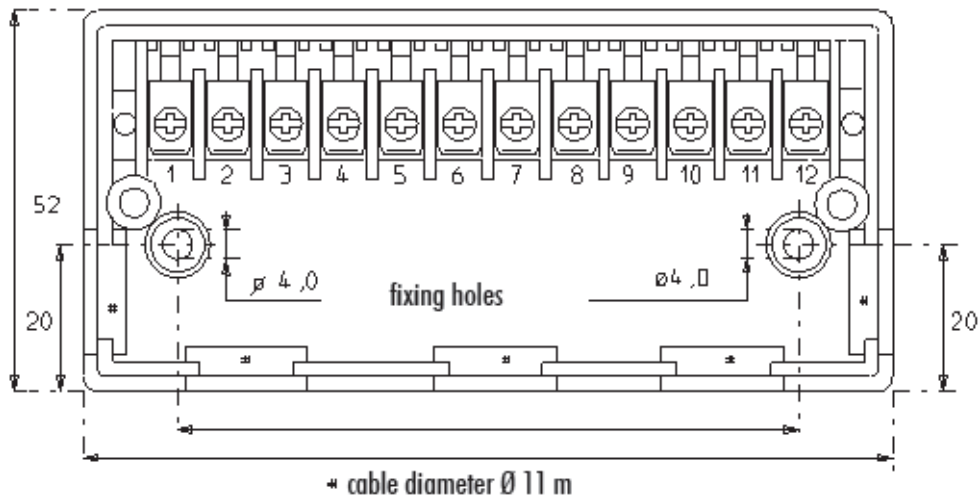



protection cable RSG-4 connect to terminal 3

With pot.meter P1 the sensitivity of the RSG-4 can be adjusted.
Exactly when the LED expires, the sensitivity is the largest. Adjusting has to be done when the sensor is dry.

With a 4 pole DIP switch SW1
on the print time delay is adjustable

1	2	3	4	switch on time	switch off time
on	on	off	on	1 s	1 s
off	on	off	off	1 s	30 s
off	off	off	off	1 s	60 s
off	on	off	on	10 s	300 s *
on	off	off	on	10 s	480 s
off	off	off	on	10 s	800 s

* = standard settings
other switches are not applicable
times +/- 20 %

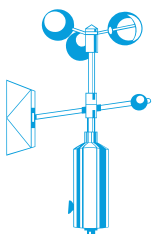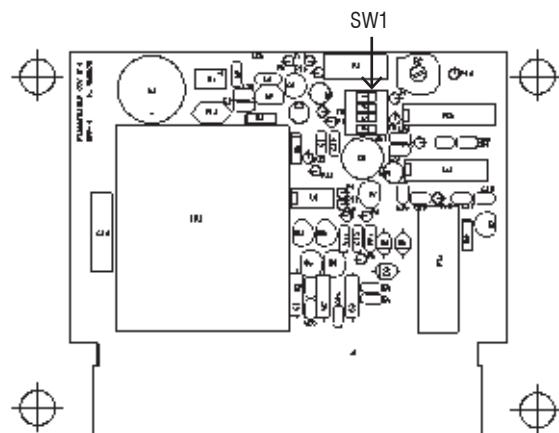

ingenieursbureau **wittich & visser** bv

scientific and meteorological instruments

handelskade 76
2288 bg rijswijk
the netherlands

p.o.box 1111
2280 cc rijswijk
the netherlands

tel +31 70 3070706
fax +31 70 3070938

info@wittich.nl
www.wittich.nl